

BEE35

Manual



SpeedyBee APP




Installation guide




Facebook QR Code

◆ CNC head part installation

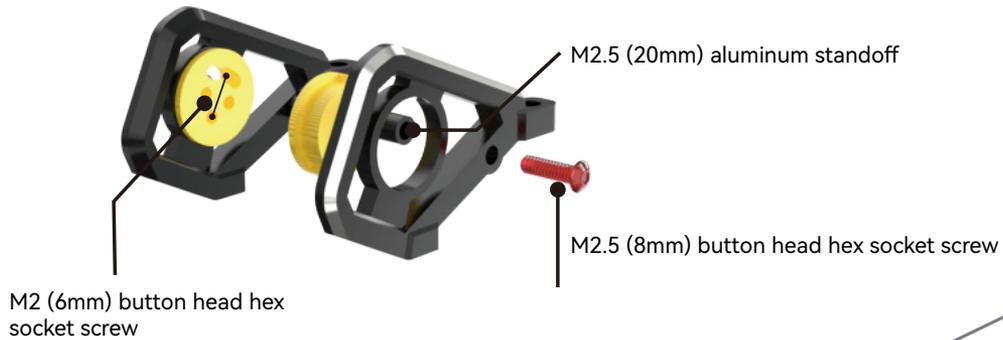



◆ Antenna Installation Sequence

insert the O-ring into the antenna to secure it on the TPU antenna base.

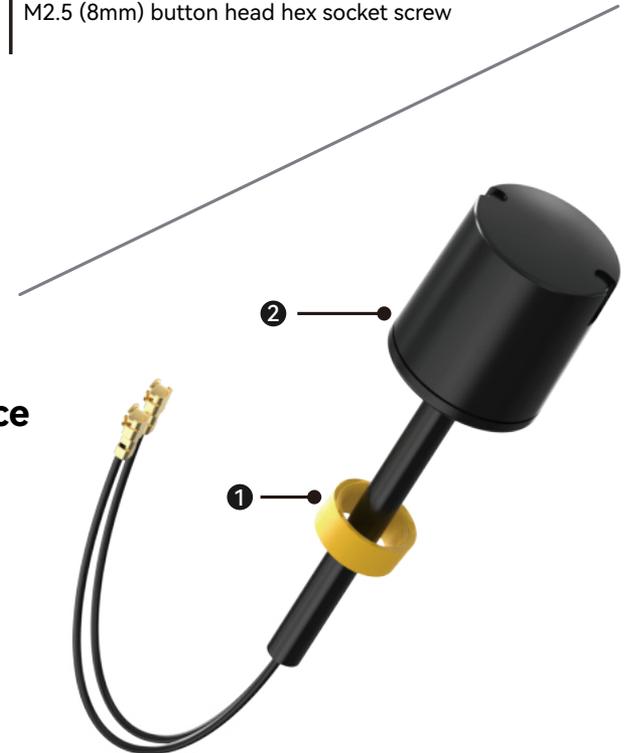

◆ FC Mounting Hole | Motor Mounting Hole

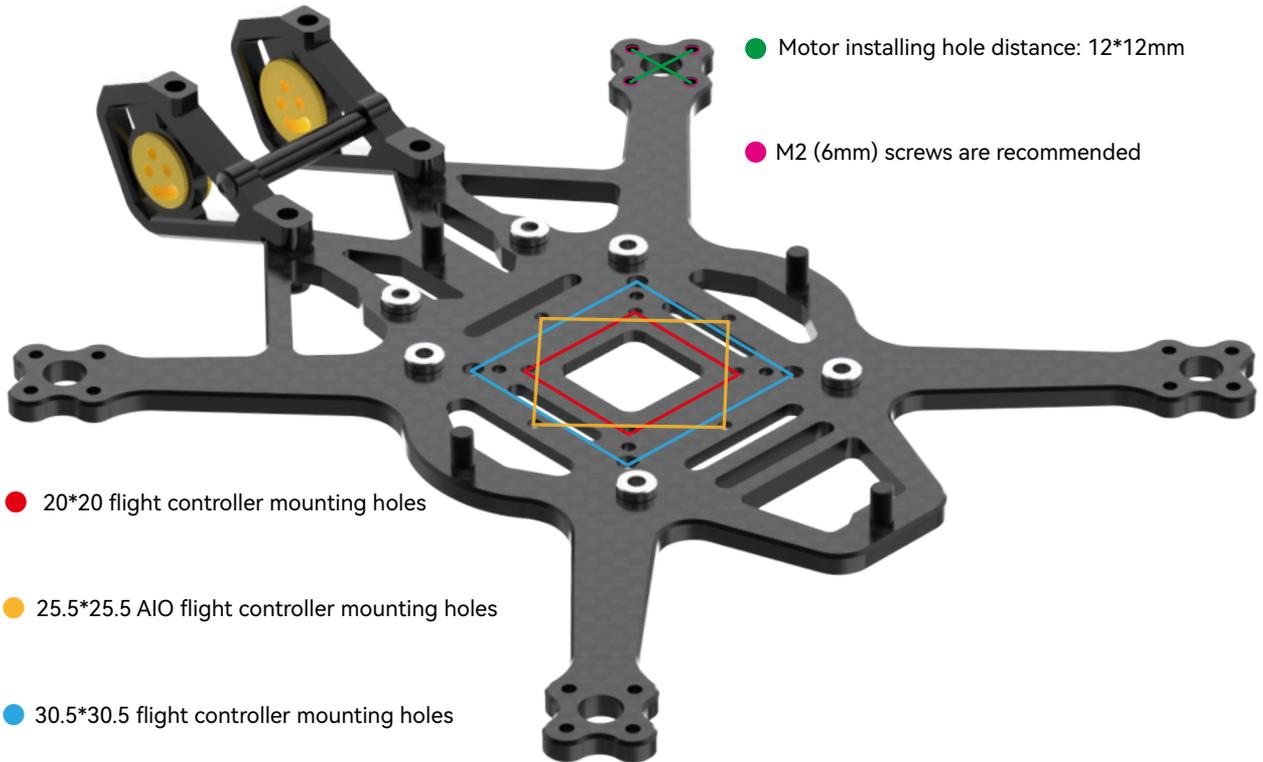

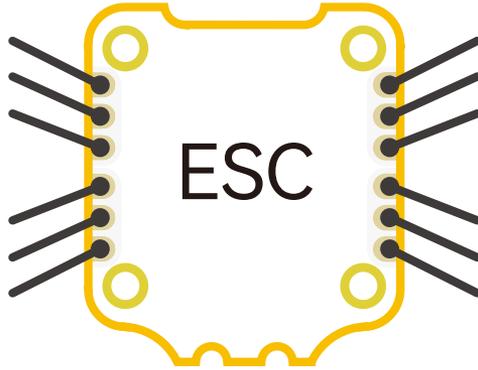

Recommended cable length for 25.5 AIO: 52mm
Recommended cable length for 20mm MINI: 62mm




*(Note: Assembly diagram, motor not included in the frame)

1:1 Scale



Multi-function Antenna Mount

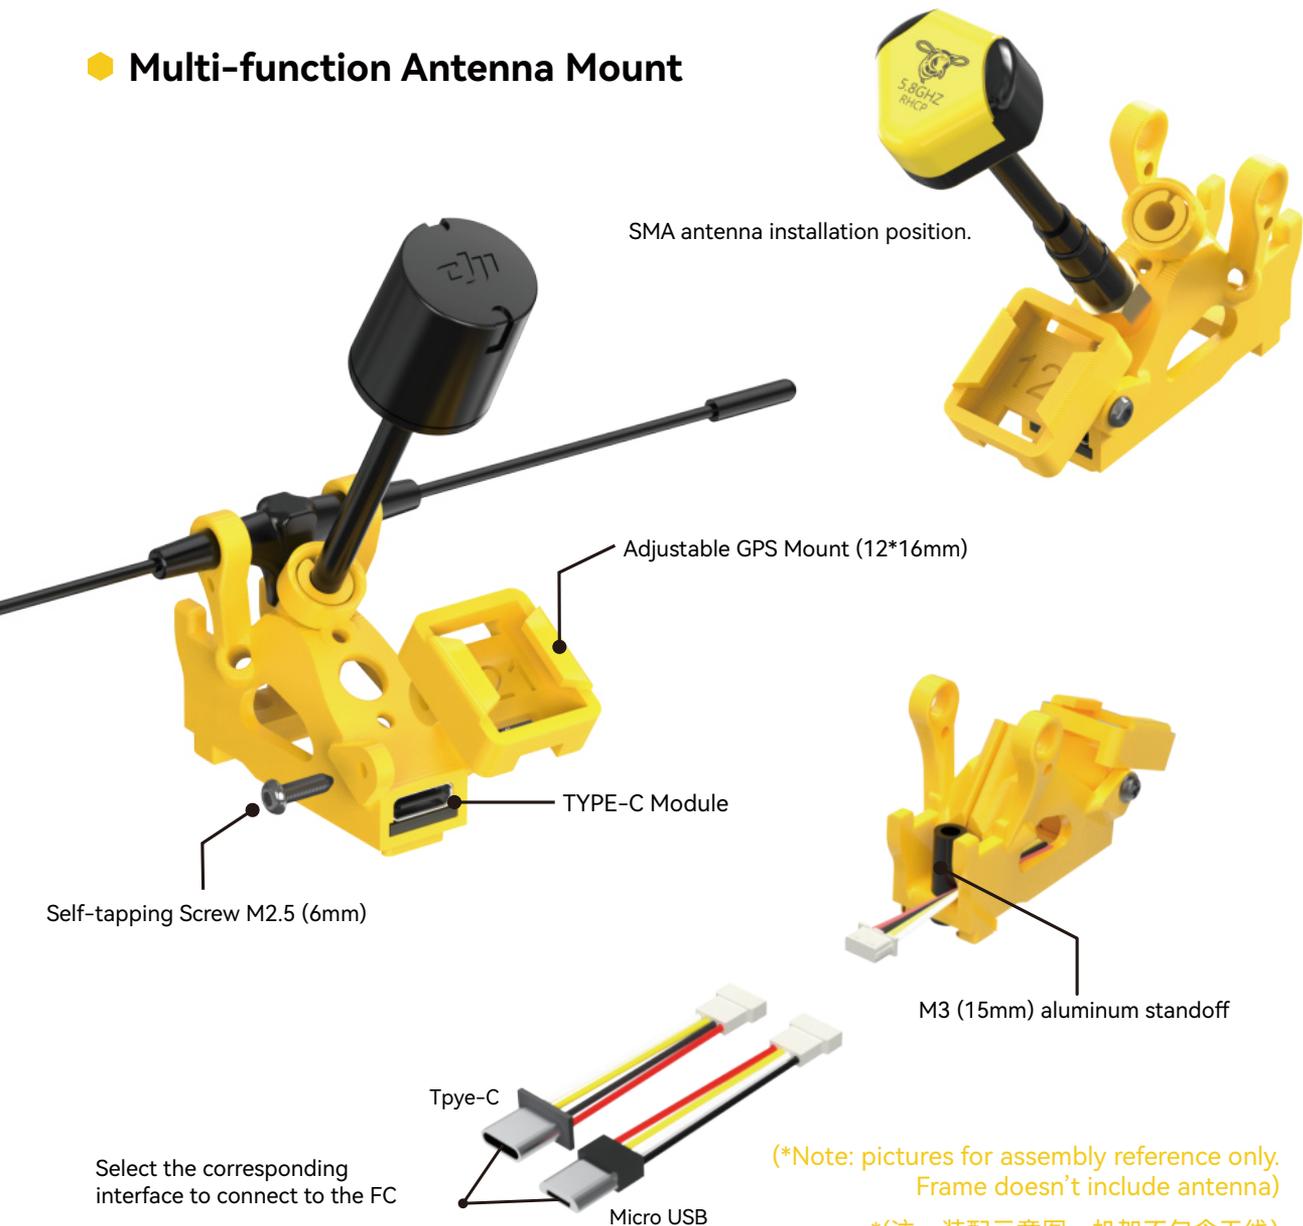

◆ CNC cooling part installation

② Install the video transmitter antenna into the TPU antenna mount.

① First, install the aluminum alloy at the bottom position.

③ Install the video transmitter into the aluminum bracket (pay attention to the orientation), and then secure it with the TPU video transmitter mount.

Note: BEE35 comes with a carbon fiber base plate, while BEE35 PRO comes with an aluminum alloy heat sink base plate.

◆ Suggesting place for main power cable



It is recommended to keep the power cable of ESC to be about 100mm.
Please refer to your own battery for actual length.

◆ CNC cooling part installation



M2 (3mm) button head hex socket screw

O3 Air Unit or RunCam Link installation
O3 Air Unit或RunCam Link

◆ Bottom screw installation



Installation Illustration


M3 (8mm) button head
hex socket screw

M3 (10mm) button head
hex socket screw


M3 (9mm) flat hex socket screw

M3 (7mm) flat hex socket screw

M3 (14mm) button head
hex socket screw

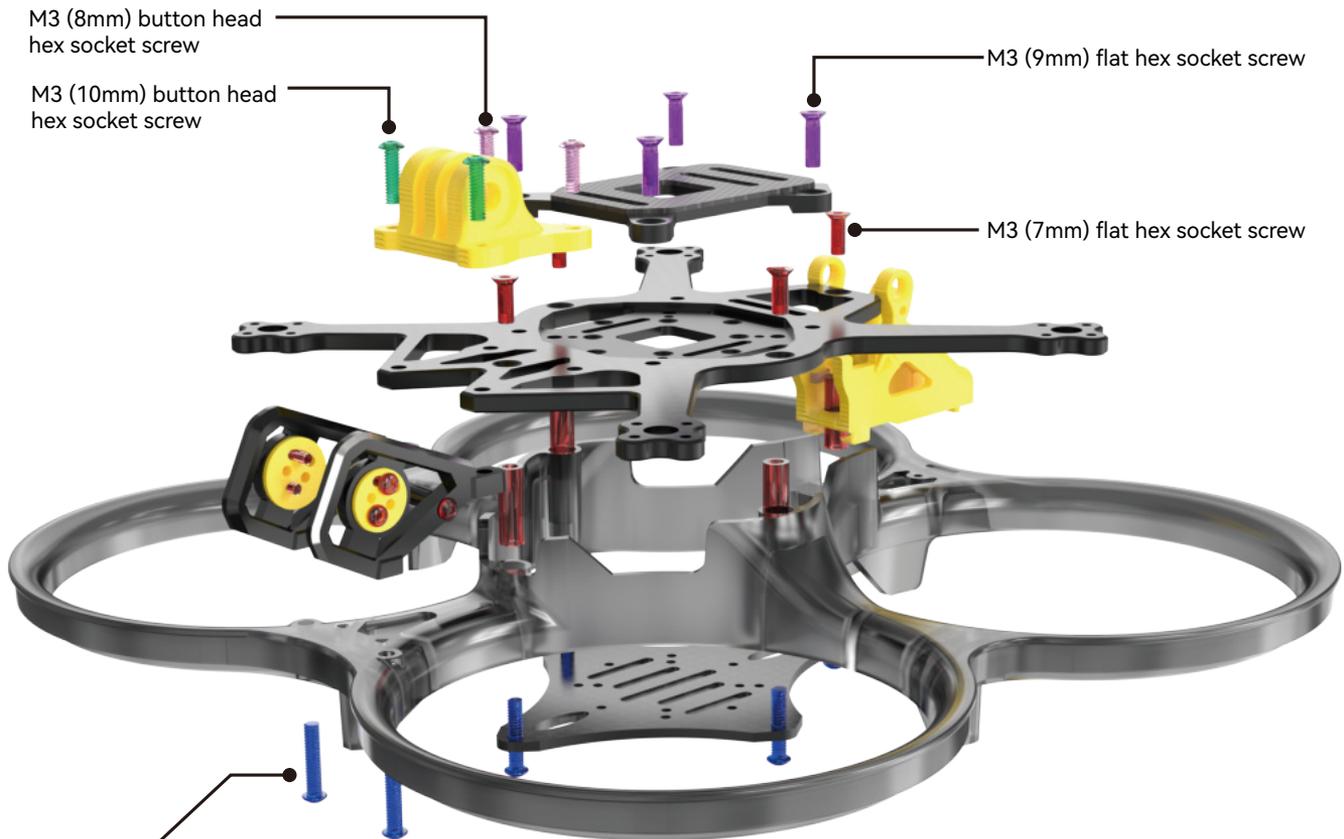

◆ Detachable anti-vibration camera base mount

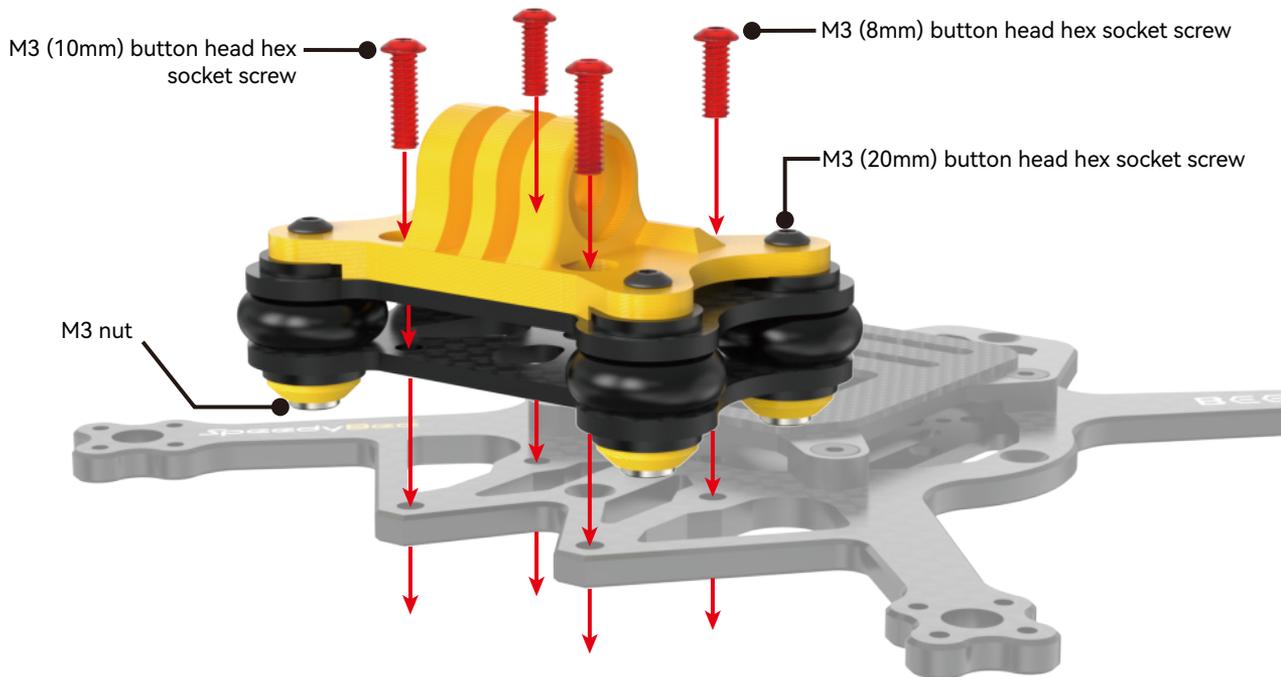

Note: This accessory needs to be purchased separately